

Emergency Enable

1. In the Map View, select the vehicle/device
2. Click on the “Emergency Enable” icon on the toolbar

