

Locate Now

1. In the Map View, select the vehicle/device to locate
2. Click on the “Locate Now” icon on the taskbar.



Or

1. In the Map View, select the vehicle/device to locate. Click on the blue arrow
2. An information bubble will appear next to the selected vehicle
3. Click on “Locate Now” button

To access Google maps and get a satellite view of the location click on the latitude and longitude coordinates on the information bubble.

